



If you have any questions regarding our products, call our toll-free consumer customer service line: **800.643.3522**  
Visit our web page: [www.hatham.com](http://www.hatham.com)

## Double Cushioned Swing Canopy

***Congratulations on your purchase of the Hatteras Hammocks® Double Cushioned Swing Canopy. We believe that you will find it a product of unsurpassed quality and durability.***

Hatteras Hammocks designed the Double Cushioned Swing Canopy to be beautiful and functional using only the highest quality materials. The canopy fits the Hatteras Hammocks Double Cushioned Swing with curved oak arms. We hope you will enjoy years of pleasure and relaxation under this swing canopy.

NOTE: Although this Swing Canopy is sold as a separate unit, it is designed to fit **ONLY** the Hatteras Hammocks Double Cushioned Swing with curved oak arms. We do not recommend that you try to attach this canopy to any other swing.

### The box contains


2 - Curved Canopy Arms  
1 - Front Canopy Brace  
1 - Center Canopy Brace  
1 - Canopy Fabric

### Hardware

2 - 3" x 3/8" Round Head Screws  
2 - 2" x 3/8" Round Head Screws  
2 - 1 1/4" x 3/8" Round Head Screws  
2 - 3/4" x 5/16" Round Head Screws  
2 - 1/4" x 5/16" Tee Nuts  
4 - 3/8" Plated Nuts  
2 - Nuts with attached LockWasher  
4 - 3/8" Washers

### You also will need:

9/16" wrench  
Standard Screwdriver

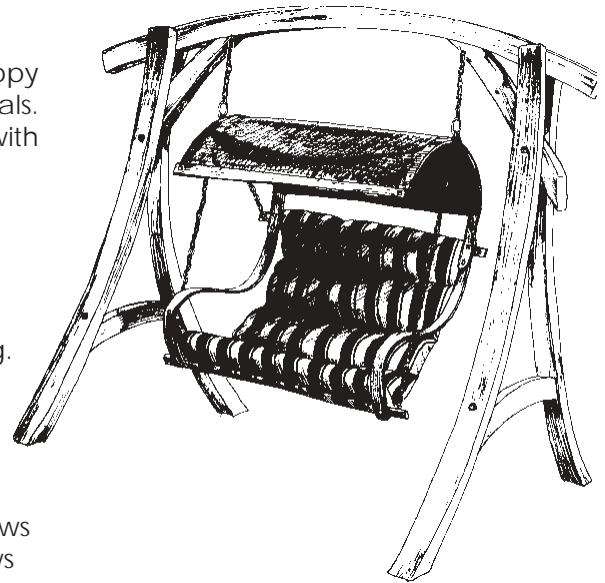

### Assembly Instructions:

1. If your Double Cushioned Swing has been in use prior to installing your Swing Canopy, you will need to remove your swing from a hanging position and place it on a flat surface.
2. Remove the 1 1/4" carriage bolt from the second hole from the top end of both curved swing arms. Disregard this step if you are installing your Swing Canopy at the same time you are assembling your Double Cushioned Swing.
3. Remove the 2 1/2" carriage bolts from the top of the curved swing arms and top stick. **SAVE THIS WASHER AND NUT.**
4. Install the curved canopy arm on the front side of the swing arm and install a 3" round head screw through the top hole (second from the end) of the canopy arm, into the top hole of the curved swing arm, and through the top stick. Use a washer and nut and **HAND TIGHTEN**. Insert 2" round head screws through the lower holes of the canopy arm and top of the swing arms on each side. Use a washer and a nut and **HAND TIGHTEN**.
3. Place a tee-nut over the hole at the top center of one of the canopy arms. Force the tee-nut prongs into the wood of the canopy arm. Repeat for the other side.
4. Find the edge of the canopy fabric that is furthest from the buttonholes. This will be the back edge of the fabric. Feed the curved canopy arms into the sleeve openings at the back edge of the fabric. Continue to slide the canopy fabric onto the canopy arms, buttonhole side down. Align the buttonholes with the tee-nuts in the canopy arms.
5. Install the center canopy brace by placing it in position on the underside of the canopy, aligning the hole on each end of the brace with the buttonhole on each side of the canopy fabric. Insert a 3/4" round head screw through the hole in one end of the brace, then through the buttonhole and into the tee nut. Tighten with a screw driver. Repeat for the other side.
6. Install the front canopy brace behind the covered arm by inserting a 1 1/4" round head screw through the hole in the arm and then into the hole in the front brace. **HAND TIGHTEN** using the nuts with attached lock washer. Repeat for the other side. Lock washers will bite into the wood and create a tight fit of the canopy fabric.




7. Square up the swing and canopy assembly making sure all bolts are tightened with a wrench. Start at the bottom of the swing and work your way up. Do not over tighten canopy braces because over-tightening may cause braces to crack.

8. Hang your swing. Adjust the height with the chains for maximum comfort. When you sit in the swing, your feet should touch the ground with your knees slightly bent.

**Care and Maintenance:**

The Hatteras Hammocks Double Cushioned Swing Canopy is crafted using the highest quality outdoor fabric available. It is designed to be weatherable and to resist fading. However, in order to keep your canopy in the best condition, it may be prudent to bring it indoors during extreme conditions.

The nature of this fabric makes it easy to clean. Simply wash it briskly with a soapy solution of liquid dishwashing detergent and warm water. Rinse your cushion thoroughly with clean water to remove the soap, and let it air dry. For stubborn stains or suntan oil, use brush tip or Kleenol 1 spot remover. Follow the directions on the container, sponge the area thoroughly with clean water, and air dry.

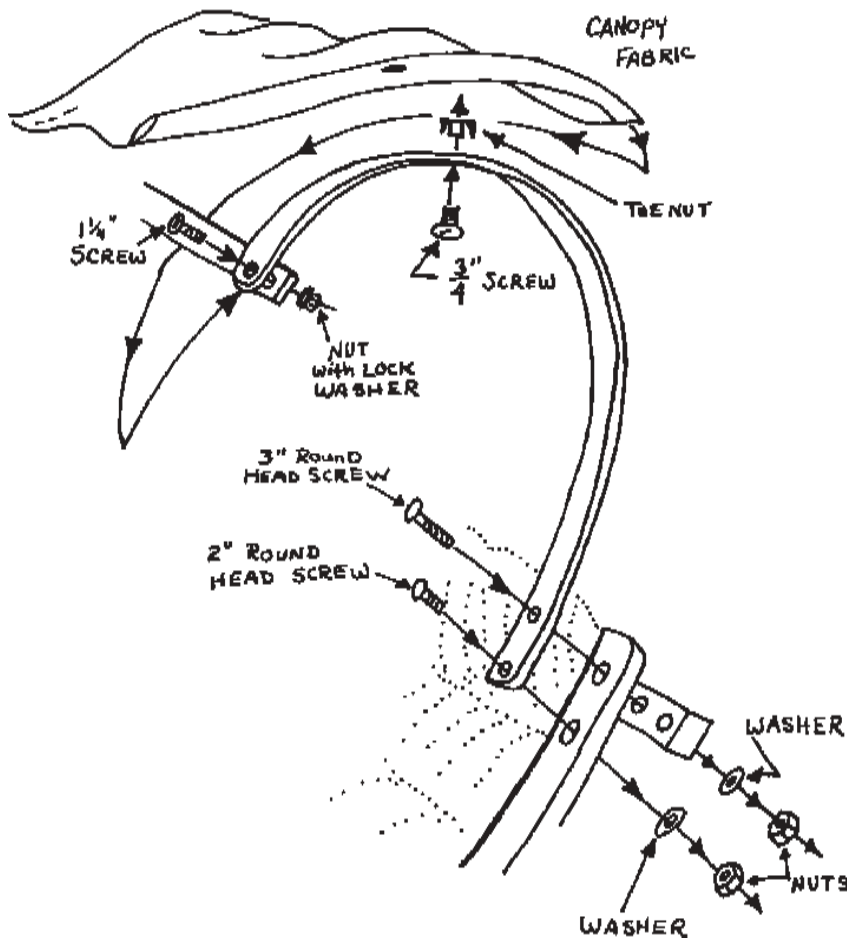

**WARRANTY INFORMATION:**

Products of The HammockSource are guaranteed to be free of defects in workmanship and materials for up to one year after the purchase date. Prolonged exposure to weather conditions including snow, rain, and humidity are not covered under the warranty nor is damage caused by normal wear, mildew, improper care including storage, maintenance, and installation. If an item is found to be defective within one year of its purchase, it will be replaced without charge upon the return of the unit accompanied by a sales receipt. A Return Authorization is needed for return and may be obtained by contacting 800.334.1078.