



If you have any questions regarding our products, call our toll-free consumer customer service line: **800.643.3522**

Visit our web page: www.hatham.com

Cushioned Single Swing

Congratulations on your purchase of the Cushioned Single Swing.

We believe that you will find it a product of unsurpassed quality and durability

The box should contain:

Cushioned Olefin Single Swing
(chain attached)
1 Screw Hook



Assembly Instructions:

1. Select a location for your swing that is 6 1/2 feet to 8 1/2 feet above ground or floor level and will support a maximum of 350 lbs.

CAUTION: Be sure the construction from which you are hanging your swing is of good condition, sturdy, and large enough to securely and safely support the swing and its maximum safe weight limit.

2. If needed, drill a 1/8"- 3/16" pilot hole for screw hook. (Pilot hole should be as small as possible, in order to insure safe assembly and use of swing.)

Insert the screw hook so that the eye of the screw is in contact with the surface of the hole. **Note: Do not over twist the hook assembly.** This may cause damage to the metal and weaken the support.

3. Hook the chain on the swing to the bottom of the screw hook. Adjust the height of the swing with the chain for maximum comfort. When sitting in the swing, your feet should touch the ground with knees slightly bent.

Note: The first time you hang the swing, it may seem too high off the ground, however; the ropes will stretch, bringing the swing to a more comfortable level. Simply adjust the chain to put your swing at the desired height.

Warning: This product allows for some turning motion, however; do not spin the swing while in use, as this action may unscrew the hook and cause injury.

Care and Maintenance:

Thank you for purchasing the Cushioned Single Swing. The following is a list of recommended maintenance procedures to assure many years of satisfactory service.

The Cushioned Single Swing utilizes olefin, a high quality outdoor fabric. It is designed to be weatherable and resist fading. However, in order to keep your swing in the best condition, bring it indoors and out of extreme conditions. This keeps cushions dry and ready for the next use.

The nature of the olefin fabric makes it easy to clean. Simply wash the cushions briskly with a soapy solution of liquid dishwashing detergent and warm water. Rinse thoroughly with clean water to remove soap before air drying. For stubborn stains or suntan oil, use Brush Tip or Kleenol 1 Spot Remover. Follow the directions on the container. Sponge thoroughly with clean water and air dry.

WARRANTY INFORMATION:

Products of The HammockSource are guaranteed to be free of defects in workmanship and materials for up to one year after the purchase date. Prolonged exposure to weather conditions including snow, rain, and humidity are not covered under the warranty nor is damage caused by normal wear, mildew, improper care including storage, maintenance, and installation. If an item is found to be defective within one year of its purchase, it will be replaced without charge upon the return of the unit accompanied by a sales receipt. A Return Authorization is needed for return and may be obtained by contacting 800.334.1078.

5038
M.1T.01